

Beside The Press Granulator

Slow Speed Granulator

The Beside the Press and standalone GSL slow speed granulator range from ZERMA, are suitable for all mould shops and materials. They are great value, simple and easy to maintain granulators.

This patented technology accurately pulls large, bulky reject parts into the cutting chamber. The rotational cutters of the 'Masher' are assembled on a rotating shaft, fixed in a frame which is located between the hopper and the cutting chamber. Cutters grab the parts and direct them easily into the cutting chamber blades.


The GSL 180 Series are mainly used in the injection and blow moulding processes as beside the press machines to grind runners and sprues. The resulting granules are then immediately reintroduced into the production process. The machines can be used for rejected products in the inline recycling process as well.

Different hopper and base frame designs make it possible to integrate the machine with most types of injection moulding machines and robots.


The slow speed granulators in the GSL 180 range feature a staggered 180 mm diameter rotor with widths ranging from 180 to 430 mm. The rotor is directly driven by a geared motor. The low rotor speed reduces the noise level of the machine and creates less dust while grinding. The special design knives of the GSL series can be sharpened easily and do not need adjustment afterwards. The material is fed via a sound absorbing feed hopper that can be tailored to fit various applications and feeding ways. Depending on the requirements the machines can be fitted with a wide variety of hoppers, they are mounted on either low or high level base frames with matching suction bins or bag filling adapters. Quick snap fasteners and hand screws make access to the machine for cleaning and maintenance fast and easy.



The curvature of the specially profiled rotor knives ensures a constant cutting radius after re-sharpening thus maintaining the original cutting gap. Awkward knife adjustment is no longer necessary.

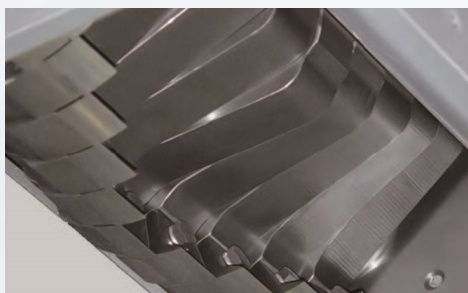

Staggered rotor blades creates an individual blade cut thus increasing the cutting torque. All of the machines in this series are therefore suitable for grinding more solid materials and thicker walled sprues.

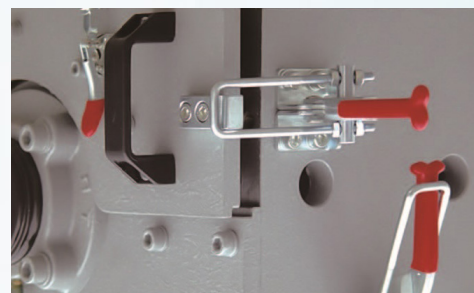

The Quick Snap System allows the lower front plate section to be easily removed for granulator cleaning. The lower front plate section is held in position by two sturdy lever clamps.

Key Features

- ▶ Direct driven staggered rotor
- ▶ Special knife design makes adjustment unnecessary
- ▶ Easy access for maintenance and cleaning
- ▶ Low rotor speed creates less noise and dust
- ▶ Easily customisable to suit different applications
- ▶ Low cost economic 'Crushmaster' version available



+44 (0) 1827 265 800


info@summitsystems.co.uk

www.summitsystems.co.uk

Beside the Press Granulator

Slow Speed Granulator

Specifications	GSL 180/120	GSL 180/180	GSL 180/300	GSL 180/430
Rotor Diameter (mm)	180	180	180	180
Rotor Width (mm)	120	180	300	430
Rotor Speed (rpm)	150	150	150	150
Drive Capacity (kW)	2.2	3	4	4
Rotor Knives (pcs)	12	18	30	45
Stator Blades (rows)	2	2	2	2
Screen Size (mm)	>5	>5	>5	>5
Weight Approx. (kg)	130	140	180	250

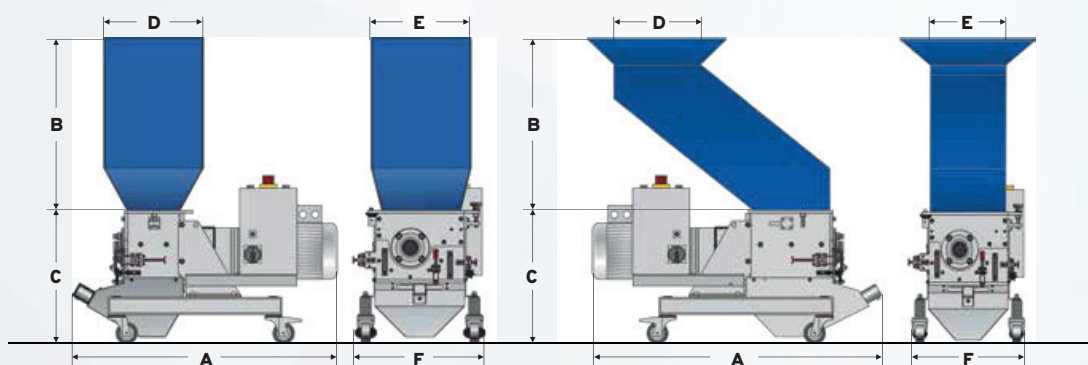

Dimensions with straight hopper (mm)

	GSL 180/120	GSL 180/180	GSL 180/300	GSL 180/430
A	835	890	1100	1240
B	610	610	610	910
C	460	460	460	550
D	345	345	345	430
E	345	345	345	290
F	455	455	455	615

Dimensions with inclined hopper (mm)

	GSL 180/120	GSL 180/180	GSL 180/300	GSL 180/430
A	835	895	1100	1240
B	760	760	760	820
C	470	470	470	560
D	315	315	345	525
E	270	270	270	270
F	440	440	440	540

GET IN TOUCH TODAY

We solve the most technically advanced plastics automation problems across all industries.



+44 (0) 1827 265 800

info@summitsystems.co.uk

www.summitsystems.co.uk

April 2023